






 



 
 



 



 




K-300plus K-650 K-400 Watch User Manual

	Setting key, confirm key, choose bit key
 	Increase or decrease number; check up and down history call
	Exit setting; cancel key (can cancel call number from screen)
	Long press this key turns on or off watch pager

1-13 Add caller

1. Long press  key for 3 seconds watch will display “add caller”
2. Press  key again , it will display “add 0001 ID”
3. Press “ ” key and “” key to select the number you want. “ ” keys for navigating up and down. “” key for selecting .
4. Press any key on the transmitter till you hear a “beep” sound and “done” displayed on the receiver screen, then the number will move to the next one. For example, if you select “0001”, and press call key from transmitter button, after saving successfully the receiver will have a “beep” sound and “done” will be displayed on the screen. Then it will display 0002.
5. When done, press “” to exit the programming state.







 




2-13 Delete caller

1. Long press “” to display “add caller”
2. Press “” key to select “delete caller”
3. Press “” to confirm. It will display “delete single” and “delete all”
4. Press “ ” to select delete single or delete all
5. If you select “delete single”, press “” to confirm, screen will display 0000. You can select the number you want to delete and long press “” till screen displays removed. This means you have deleted this number.
6. If you select “delete all”, long press “” till screen displays removing all and removed. This means you have delete all the transmitter buttons.
7. When done, press “” to exit the programming state.


3-13 Key function

Area Set: Sets different zone from 0-9 and A-Z when paired with the service type


Type Set: Modifies the Service type

1. Long press “” to display “add caller”
2. Press “” key to select “key function” and press  to confirm
3. It will display “Area 0”, press  to confirm. “set 0’s key” will be displayed
4. Press  to confirm , it will display call (navigate using “ ” to see different key options)
5. Select the option you want
6. Press  to exit , and watch will display “set 0’s key” and “copy 0 to all” .Then press  to select “copy 0 to all” and press  to confirm. Watch will display “copying”.
7. press  several times to exit.


4-13 Work mode.

1. Long press “


5-13 Display Mode

1. Long press “


6-13 Prompt mode

1. Long press “


7-13 Prompt timing

1. Long press “


00 means prompt all the time without stopping until the watch is turned off

3. Choose the time you want, and press “


8-13 Remove timing

1. Long press “

9-13 Cycle timing




 

1. Long press “

10-13 Date &Time

1. Long press “

2

11-13 Keyboard set






1. Long press “” key for 3 seconds to display “add caller”
2. Press “” key to select “Keyboard set ”
3. Press “” to confirm. you will see OFF ALL/ON ALL/00/01/02/03/04/05/06/07/08/09,
If you want watch work with 1st zone keypad, you will select 01 . Press “” to confirm.
4. press “” to exit the programming. If you press 5 from keypad. Watch will display 1005 . if in step 3 you chose 02 , the watch will display 2005 .

12-13 Language

CN

EN

13-13 factory reset

1. Long press “” key for 3 seconds to display “add caller”
2. Press “” key to select “factory reset”
3. Press “” to confirm, screen will display confirm reset? yes/no
4. Select Yes and Long Press “” to confirm till screen displays factory resetting.
5. When done, press “” to exit the programming.