



INSTALLATION MANUAL

1. Mount the timer indoors in a safe location.
2. Mount the sounders outdoor at convenient location where it will be heard the entire compound but in a safe location where it can't be rained on.
3. Connect load (L1 and L2) from the timer to the sounder.
4. Connect power(S1 and S2) from the timer to an AC power source (flat twin 1.0 mm cable is enough)
5. Make sure the drop down arrow ▼ on the screen below the clock is on OFF position while doing the connection.

SETTING TIME

1. Press CLOCK button. While holding the CLOCK button down, press HOUR button to adjust the hour.
2. Press CLOCK button. While holding the CLOCK button down, press MIN button to adjust the minutes.
3. Press CLOCK button. While holding the CLOCK button down, press DAY button to adjust the day.

PROGRAMMING

1. Press OROG button to enter the programming mode.
2. --:-- will appear on the screen.
1^{ON}
3. This is the first memory slot for programming.
4. Press HOUR button to adjust the hour.
5. Press MIN button to adjust the minutes.
6. Press DAY button to select the day pattern
7. If you want to set a double ring, press AUTO/MANU button. Two bells 🛎️ will appear on the right hand side of the set time. This indicates that that bell will ring twice depending on the time set on'd' while **SETTING DOUBLE BELL**.
8. If you want to clear the set time press RST/RCL button. The screen will clear.
9. Repeat steps 4 to 8

SETTING THE RING TIME

1. Press OROG button until **H 10** appears on the screen. This indicates that the bell has been set to ring for 10 seconds.
2. Press MIN button to adjust the ringing time to your preference.
NB: The ring time is set in seconds even though the adjustment is made using the MIN button.

SETTING DOUBLE BELL

1. Press OROG button until **d 45** [Ⓐ] appears on the screen. This indicates that the bell will ring after 45 minutes in the bell schedule set in **PROGRAMMING** step 7 above.
2. Press MIN button to adjust the time for double bell to your preference.
NB: The double bell will only apply in the bell schedule set in **PROGRAMMING** step 7 above, not all bells will ring double.

SETTING AUTO, ON, OFF

1. After programming, press the AUTO/MANU button till the drop down arrow ▼ below the screen points at AUTO.
2. When going for holidays, press the AUTO/MANU button till the drop down arrow ▼ below the screen points at OFF.
3. In case you want to trigger the sounder anytime, press the AUTO/MANU button till the drop down arrow ▼ below the screen points at ON then return the switch to its initial position.