



INSTALLATION MANUAL

1. Insert 2 AAA dry cell long life batteries in the battery slot.
2. Mount the timer indoors in a safe location.
3. Mount the sounder outdoors at convenient location where it will be heard the entire compound.
4. Connect load (L1 and L2) from the timer to the sounder.
5. Connect power(S1 and S2) from the timer to an AC power source (flat twin 1.0 mm cable is enough)
6. Make sure the AUTO, ON , OFF switch (black switch on the left) is in OFF position


SETTING TIME

1. Press MODE once (TC will appear on the top left corner of the LCD)
2. Press SELE once (The hour display on the LCD will start to blink. Use + and – to adjust the hour)
3. Press SELE again (The minutes display on the LCD will start to blink. Use + and – to adjust the minutes)
4. Press SELE again (The seconds display on the LCD will start to blink. Use + and – to adjust the seconds)
5. Press SELE again (The day display on the top of the LCD will start to blink. Use + and – to adjust the day)
6. Press MODE again to exit

PROGRAMMING

1. Press MODE until PROG appears on the left side of the LCD

At first, this is what will be displayed

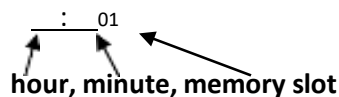

You are now in memory slot 1

2. Press SELE until hour display starts to blink (use + and – to adjust the hour)
3. Press SELE until minute display starts to blink (use + and – to adjust the minutes)
4. Press SELE until day display starts to blink. Select the day you want the time set above programmed.

e.g if it is 8.00 am and you want it to ring from Monday to Friday, press + and select Monday to Friday (Take note of ON below the LCD). If it is 7.00 am and you want it to ring on Monday and Sunday only, press + to move from Monday to Sunday. Use – to toggle between ON and OFF.

5. To move to the next memory slot, press SELE until the memory slot starts to blink. Adjust using + and-.
6. Repeat steps 2 to 5.
7. To delete a memory slot, press AUTO/MAN while on PROG mode.

SETTING THE RING TIME

1. Press mode until TL appears on the bottom left of the LCD.
This is what will be displayed

0:00:00
↑ ↑ ←
Hour, minute, second

2. Press SELE until the seconds display starts to blink. Use + and – to adjust the number of seconds. 5-10 seconds are enough.
3. Press mode to exit the programming mode.
4. Press the AUTO/MAN button to change the off below the LCD to AUTO. If it is on AUTO just leave it as it is.
5. Turn the side switch to AUTO.

ACCURACY ADJUSTMENT

1. Press mode until ER appears on the left hand side of LCD
This is what will be displayed

ER — _

2. Press SELE and the two dashes will start to blink. Use + and – to adjust the preset value. E.g if the timer was lagging normal time with 5 seconds enter 05, if the timer was ahead of normal time by 5 seconds, enter - 05.

AUTO, ON, OFF SWITCH (BLACK)

1. After programming, turn the switch to AUTO (up) and the programmed schedules will ring automatically.
2. When going for holidays, turn the switch to OFF (central position)
3. In case you want to trigger the sounder anytime, turn the switch to ON (down) for the time you want it to sound then return the switch to its initial position.