


K-50 Display Receiver User Manual

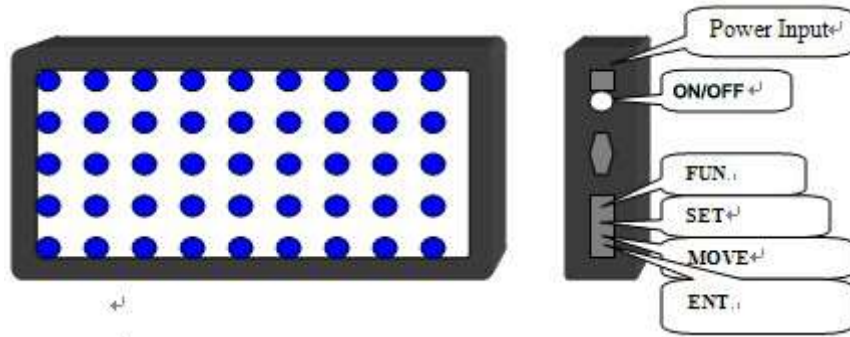

Brief instruction:

F1-11 Set Transmitter Number

F1-12 Delete Transmitter Number

F2-21 Add Remote Control

F2-22 Delete Remote Control

F3-31 Setting the number of cycle display

F3-32 Setting the display time of last call

F3-33 Setting the lead time between two calls

F4-41 Setting single key or multi-key mode

F5-51 Volume adjust

F5-52 Dingdong sounds or Chinese prompt

F6-61 Delete all transmitter Numbers

F6-62 Delete all remote numbers

F6-63 Restore Manufacture Settings

F1-11 Set transmitter number

1. Press “FUN” key, the screen will display “F1”

2. Press “ENT” key to display “11” (Second “1” is flashing)
3. Press “ENT” key to display “01” (“1” is flashing)
4. Press “MOVE” and “SET” to select the transmitter number you want to save.
5. Press ENT” to confirm the number. And the number will stop flashing.
6. Press any key on the transmitter for 3s till the number goes to the next one. For example, if you choose “01”, when programming is successful; the receiver will show “02” automatically. When next number is displayed, press “ENT” and the number will stop flashing.
7. When done, press “FUN” to exit the setting state.

Note:

1. When the receiver displays “EA”. It means the number has been used.
2. When the receiver displays “EF”. It means the receiver is full, cannot save any more numbers.

F1-12 Delete transmitter number

1. Press ‘FUN” key ,the screen will display “F1”
2. Press “ENT” key to display “11” (Second “1” is flashing)
3. Press “SET” to display “12”; (“ 2” is flashing)
4. Press: “ENT” to display “01” ;(“1” is flashing)
5. Press “MOVE” and “SET” to select the transmitter number you want to delete
6. Press “ENT” , the number will stop flashing and press the button for 3s will it will start flashing again. This means it is successful. Press the “FUN” key to exit the setting state.

F2-21 Add Remote Control

1. Press “FUN” , the screen will display “F1”
2. Press “MOVE” or “ SET” to select “F2”
3. Press “ENT” to display “21”
4. Press “ENT” to display “00”
5. Press “MOVE” and “ SET” to choose the number of remote control you want add
6. Press remote control for 3s till “ -d” displays .This means the remote has been added is successful.
7. If you want add other remote controls follow steps 5 and 6.
8. Press “FUN” to exit the setting state.

F2-22 Delete Remote Control

1. Press “FUN” , to display “F1”
2. Press “MOVE” or “ SET” to select “F2”
3. Press “ENT” to display “21”
4. Press “SET” to display “22”
5. Press “ENT” to display “00”
6. Press “MOVE” and “SET” to choose the number of remote control you want delete
7. Press “ENT” to delete the number
8. If you want delete other remote controls follow steps 5 and 6.
9. Press “FUN” to exit the setting state.

F3-31 Setting the number of cycle display

“00” means the display mode is steady. Other number means how many calls you want to cycle. “ 29” numbers in max.. For example if you set “10” , it means the last 10 numbers will show circularly with ring until the numbers are cancelled.

1. Press “FUN” ,to display “F1”
2. Press “SET” to select “F3”
3. Press “ENT” to display “31”
4. Press “MOVE” and “SET” to select the number you want.
5. Press “ENT” to confirm the mode
6. Press “FUN” to exit

F3-32. Setting the display time of last call

The number you choose is the time the last call will display

F3-33. Setting the lead time between two calls

The number you choose means the lead time between previous call and next call.

1. Press “FUN” , to display “F1”
2. Press “SET” ,to select “F3”
3. Press “ENT” to display 31
4. Press “ SET” to select 33 and Press ENT
5. Press “SET” and “Move” to choose the lead time you want.

When F3-31 the number you choose is “0” , and you set the lead time to 5 seconds. If No.1 NO.2 No.3 call in turn. It means No. 1 will first show on screen and No.2 will follow but it

will wait for 5 seconds. After No.2, No.3 will also wait for 5 seconds.

F4-41 Setting single key or multi-key mode

“1” single key mode ; “4” multi-key mode

F5-51 Volume adjust

“0” lowest “1” second level “2” third level etc.

F5-52 Dingdong sounds or Chinese pronunciation

“0” dingdong sounds

“1” Chinese pronunciation

F6-61 Delete all transmitter numbers

1. Press “FUN” key, to display “F1”
2. Press “ MOVE” or “ SET” to select “F6”
3. Press “ ENT” to display “61” ; “1” is flashing
4. Press “ENT” to display “ -d “ and wait 3-5s “ -d “ will flash. This means deleting is successful.
5. Press “FUN” to exit the setting state.

F6-62 Delete all remote numbers

1. Press “FUN” key, to display “F1”
2. Press “ MOVE” or “ SET” to select “F6”
3. Press “ ENT” to show “61” ; “1” is flashing
4. Press “ SET” to select “62”
5. Press “ENT” to display “ -d “ and wait 3-5s “ -d “ will flash. This means deleting is successful.
6. Press “FUN” to exit the setting state.

F6-63 Restore Manufacture Settings

1. Press “FUN” key, to display “F1”
2. Press “ MOVE” or “ SET” to select “F6”
3. Press “ ENT” to display “61” ; “1” is flashing
4. Press “ MOVE” or “ SET” to select “63” , “3” is flashing
5. Press “ENT”