



K-4-C K-4-D Series Display User Manuals

Instruction

F1 Registration Mode (Set Transmitters number)

- E1-Register Transmitters
- E2-Register Remote Control
- E3-Register Alarm Function Transmitters
- E4-Register Cancel Function Transmitters

F2 Deletion Mode (Delete Transmitter Number)

- E1-Delete Transmitters
- E2-Delete Remote Control
- E3-Delete Alarm Function Transmitters
- E4-Delete Cancel Function Transmitters

F3 Display Setting

- E1 Display Mode
- E2 Storage Number

F4 Logout Setting (Remove Timing Setting)

F5 Cycle Mode

F6 Voice Setting

- E1-Voice Mode
- E2- The times of Voice Announcements
- E3-Whether to read the number when cycling
- E4-Volume Setting
- E5-Brightness setting
- E6-Operational sound navigation
- E7- “Number” position
- E8-To be developed
- E9-Whether read Counter Number (Suit for queue call system)

F7 Keyboard Setting

- E1 Partition Setting

F8 Key Settings

- E1 Single-key or Multi-key Setting
- E2 Voice pairing

F9 Restore Factory Settings

 : Setting key, Confirm key, Move digit key




 

 

 
 : Exit system

 : Up key, Increase number key

 : Down key, Decrease number key





 
 
 


F1 Storage Mode

E1 Register Transmitters

1. Press “” key 2 seconds, the screen will display F1
2. Press “” key, the screen will display E1
3. Press “” to confirm, the screen will display 001, “1” is flashing, press “” “” “” key to choose the number you want.
4. Press any key from transmitter, you will hear a voice (success) the number has been registered successfully and then the number will skip to next one,.
5. Press “” it will exit to “E1”, press “” again to exit setting state.

NOTE: If you hear a voice (failure), it means number has been used.

E2 Register Remote Control

1. Press “” key 2 seconds, the screen will display F1
2. Press “” key, the screen will display E1, press  to E2
3. Press “” to confirm, screen will display 001, “1” is flashing, press “” “” “” key to choose the number you want to.
4. Press any key from the remote, you will hear a voice (success) the number has been registered successfully and then the number will skip to next one.
5. Press “” it will exit to “E2”, press “” again to exit setting state.

E3 Register Alarm Function Transmitters

1. Press “*” key 2 seconds, the screen will display F1
2. Press “*” key, the screen will display E1, press “↓” key two times to E3
3. Press “*” to confirm, the screen will display 001, “1” is flashing, and press “↑” “↓” “*” key to choose the number 001-999.
- 4 Press any key from alarm transmitter, you will hear a voice (success) the number has been registered successfully and then the number will skip to next one.,
5. Press “↵” it will exit to “E3”, press “↵” again to exit setting state.

E4 Register Cancel Function Transmitters

1. Press “*” key 2 seconds, the screen will display F1
2. Press “*” key, the screen will display E1, press “↑” key to E4
3. Press “*” to confirm, the screen will show 001, “1” is flashing, and press “↑” “↓” “*” key to choose the number 001-999.
- 44 Press any cancel key from transmitter, you will hear a voice (success) the number has been registered successfully and then the number will skip to next one.
5. Press “↵” it will exit to “E4”, press “↵” again to exit setting state

F2 Deletion Mode

E1 Delete Transmitters

1. Press “*” key 2 seconds, the screen will display F1
2. Press “↓” key to display F2, press “*” to display E1
3. Press “*” to confirm, the screen displays 001, “1” is flashing, and press “↑” “↓” “*” key to choose the number you want to delete.
4. Press “*” key, you will hear a voice (success),this means number is deleted successfully.
5. Press “↵” it will exit to “E1”, press “↵” again to exit setting state

E2 Delete Remote Control

1. Press “*” key 2 seconds, the screen will display F1
2. Press “↓” key, the screen will display F2, press “*” screen will display E1, press “↓” to display E2
3. Press “*” to confirm, the screen displays 001, “1” is flashing, and press “↑” “↓” key to choose the number you want to delete.
4. Press “*” key, you will hear a voice (success), this means number is deleted

successfully.

5. Press “↵” it will exit to “E2”, press “↵” again to exit setting state

E3 Delete Alarm Function Transmitters

1. Press “*” key 2 seconds, the screen will display F1
2. Press “↓” key, the screen will display F2, press “*” screen will display E1, press “↓” two times to show E3
3. Press “*” to confirm, the screen displays 001, “1” is flashing, and press “↑” “↓” key to choose the number you want to delete.
4. Press “*” key, you will hear a voice (success), this means number is deleted successfully.
5. Press “↵” it will exit to “E3”, press “↵” again to exit setting state

E4 Delete Cancel Function Transmitters

1. Press “*” key 2 seconds, the screen will display F1
2. Press “↓” key, the screen will display F2, press “*” the screen will display E1, press “↑” to show E4
3. Press “*” to confirm, screen displays 001, “1” is flashing, and press “↑” “↓” key to choose the number you want to delete.
4. Press “*” key, you will hear a voice (success), this means number is deleted successfully.
5. Press “↵” it will exit to “E4”, press “↵” again to exit setting state

F3 Display Setting

E1 Display Mode

1. Press “*” key 2 seconds, the screen will display F1
2. Press “↓” key two times to display F3, press “*” the screen will display E1
3. Press “*” to display 1 or 2, and then choose the one you need
“1” means live mode- -means when No.1 No.2 No.3 call in turn, the screen shows 003 002 001. Newest call number shows on the top of screen.
“2” means queue mode- -means when No.1 No.2 No.3 call in turn, the screen shows 001 002 003. Oldest call number shows on the top of screen.
4. Press “↵” it will exit to “E1”, then it is successful.
5. Press “↵” again to exit setting state

E2 Storage Number

1. Press “*” key 2 seconds, the screen displays F1
2. Press “↓” key two times, screen displays F3, press “*” screen displays E1, press “↓” to display E2
3. Press “*” to confirm, press “↑” “↓” to choose the number from 01-99
4. Press “↶” it will exit to “E2”.
5. Press “↶” again to exit setting state

F4 Logout Setting (Remove Timing Setting)

1. Press “*” key 2 seconds, screen displays F1
2. Press “↓” key three times, screen displays F4, press “*” screen displays 00(or other numbers).
3. Press “↑” “↓” to choose the number from 00-99
“00” means the number will display on the screen until it is canceled.
“01-99” means the last call display time. If you choose 50, it means last number will display for 50 seconds on the screen. When time the time is up, this number will be deleted automatically
4. Press “↶” it will exit to “F4”, then it is successful.
5. Press “↶” again to exit setting state

F5 Cycle Mode

1. Press “*” key 2 seconds, screen displays F1
2. Press “↓” key four times, screen displays F5, press “*” screen show 00(or other number)
3. Press “↑” “↓” to choose the number from 00-99
“00” means the number will not cycle every second
“01-99” means the time of number display cycling. For example, if you choose 10 seconds, it means each 10 seconds number will cycle one time.
4. Press “↶” it will exit to “F5”.
5. Press “↶” again to exit setting state

F6 Voice Setting

E1 Voice Mode

1. Press “*” key 2 seconds, screen displays F1
2. Press “↓” key five times, screen displays F6, press “*” screen displays E1
3. Press “*” to confirm, screen displays 0(or other number)
4. Press “↑” “↓” to choose the number from 0-7
“0” means English pronunciation (number and service type)
“1” means English pronunciation (number only)
“2” means English pronunciation (eg.No.105: One hundred and five + service type)
“3” means English pronunciation (eg.No.105: One hundred and five)
“4” means Ding Dong voice alert
“5” means music alert 1
“6” means music alert 2
“7” means warning sound
5. Press “↶” it will exit to “E1”.
6. Press “↶” again to exit setting state

E2 The times of Voice Announcements (Default:1 time)

1. Press “*” key 2 seconds, screen displays F1
2. Press “↓” key five times, screen displays F6, press “*” screen displays E1, press “↓” to display E2
3. Press “*” to confirm, screen displays 1(or other number)
4. Press “↑” “↓” to choose the number from 1 to 9. (The number means the times of repeating announcements)
5. Press “↶” it will exit to “E2”.
6. Press “↶” again to exit setting state

E3 Alert voice while cycling (Whether to read the number while on cycling mode)

1. Press “*” key 2 seconds, screen displays F1
2. Press “↓” key five times, screen displays F6, press “*” screen displays E1, press “↓” two times to display E3
3. Press “*” to confirm, screen displays “0” or “1”
4. Press “↑” “↓” to choose the number you want.

“0” means no voice alert for cycling. If you choose “0” it means, No.1 2 3 4 5 etc. will show circularly without ringing.

“1” means with voice alert for cycling. If you choose “1” it means, No.1 2 3 4 5 etc. will show circularly while ringing.

5. Press “↶” it will exit to “E3”,
6. Press “↶” again to exit setting state

E4 Volume Setting (Default: 6)

1. Press “*” key 2 seconds, screen displays F1
2. Press “↓” key five times, screen displays F6, press “*” screen displays E1, press “↓” three times to display E4
3. Press “*” to confirm, screen show “0” (or other numbers)
4. Press “↑” “↓” to choose the number you need.

“1” is mute. 9 is highest volume.

5. Press “↶” it will exit to “E4”,
6. Press “↶” again to exit setting state

E5 Brightness setting (Default: 3)

1. Press “*” key 2 seconds, screen displays F1
2. Press “↓” key five times, screen displays F6, press “*” screen displays E1, press “↓” four times to display E5
3. Press “*” to confirm, screen displays “0” (or other number)
4. Press “↑” “↓” to choose the number you need.

“1” is darkest. “7” is brightest.

5. Press “↶” it will exit to “E5”,
6. Press “↶” again to exit setting state

E6 Operational sound navigation

0---OFF 1---OPEN

E7 “Number” position

0---Number 001 CALL(English Way)

1---001 Number CALL(Chinese Way)

E8 To be developed

E9 Whether read Counter Number (Suit for queue call system)

0---Please Number xxx go to Counter xx + Service type

1---Please Number xxx go to Counter + Service type

F7 Keyboard Setting (Default: OFF)

E1 Partition Setting

1. Press “*” key 2 seconds, screen displays F1
2. Press “↓” key six times, screen displays F7, press “*” screen displays E1
3. Press “*” to confirm, screen show “OF” or “ON” or “1” “2” “3” “4” “5” “6” “7” “8” “9” “0” “A” “b” “c” “d” “E”

“OF” means display can’t receive all signals from all different partition’s keyboard

“ON” means display can receive all signal from all different partition’s keyboard number

001-999

“0” or “1” or “2” “E” means display can only receive one partition’s signal

4. Press “↑” “↓” to choose the number you need.
5. Press “↶” it will exit to “E1
6. Press “↶” again to exit setting state

NOTE: If the keyboard in partition 5, display also chooses 5, means display can receive all signals 001-999 from keyboard.

F8 Key Settings

E1 Single-key or Multi-key Setting

1---Single key

2---Multi key

E2 Voice pairing

1. Press “ * ” key 2 seconds, screen displays F1
2. Press “ ↓ ” key seven times, screen displays F8, press “ * ” screen displays E1
3. Press “ ↓ ” to display E2 and Press “ * ” to confirm, and you will see 00 (sound cancel)
4. Press “ ↑ ” “ ↓ ” to choose the number (voice) you need.

For example, if you need “emergency” , you choose 26 , And press “emergency “ key from button. Then you will hear successful.

5. Press “ ↶ ” again to exit setting state

When you press Emergency of button, you will hear voice like this “XX number Emergency”

F9 Restore factory setting

1. Press “ * ” key 2 seconds, screen shows F1
2. Press “ ↓ ” key 8 times, screen shows F9, press “ * ” screen shows E1
3. Keep press “ * ” 2 seconds to confirm, you will hear a voice (success), then it is successful. And display exit setting state automatically.