



## K-O3-N+K-436-B Display User Manuals

Press start from next, then display will show 001. When you turn off display, number will start counting from 001 again .. Go to F9 and set F1-E1 .

This manual is fit for all displays. K-436-B available functions include F1-E1 F1-E2 F2-E2 F4 F6 FP F9

### Brief instruction

#### F1 Storage Mode (Set Transmitters number)

- E1-Register Transmitters
- E2-Register Counter Number

#### F2 Deletion Mode (Delete Transmitter Number)

- E1-Delete Transmitters
- E2-Delete Counter Number

#### F3 Display Setting

- E1 Display Mode
- E2 Storage Number

#### F4 Logout Setting (Remove Timing Setting)

#### F5 Cycle Mode

#### F6 Voice Setting

- E1-Voice Mode
- E2- The times of Voice Announcements
- E3-Whether to read the number when cycling
- E4-Volume Setting
- E5-Brightness setting
- E6-Operational sound navigation

E7- “Number” position

E8-To be developed

E9-Whether read Counter Number (Suit for queue call system)

#### F7 Keyboard Setting (To be developed)

#### F8 Key Settings

- E1 Single-key or Multi-key Setting
- E2 Voice pairing

#### FP Choose the first number you like to start register

#### F9 Restore Factory Settings

 : Setting key, Confirm key, Move digit key

 







 : Exit system

 : Up key, Increase number key




 : Down key, Decrease number key

#### F1 Storage Mode

##### E1 Register Transmitters

1. Press “” key 2 seconds, the screen displays F1
  2. Press “” key, screen displays E1
  3. Press “” to confirm, the screen displays 01, “1” is flashing, and press “” “” “” key to select the number you want to save.
  4. Press any key from the transmitter, you will hear a voice (success) the number has been registered successfully and then the number will skip to the next one,.
  5. Press “” it will exit to “E1”, press “” again to exit setting state.
- NOTE: If you hear a voice (failure), it means number has been used.

##### E2 Register Counter Number

1. Press “” key 2 seconds, the screen will display F1
2. Press “” key, screen will display E1, press  to E2

3. Press “\*” to confirm, screen displays 1, “1” is flashing, and press “↑” “↓” “\*” key to choose the number you want to save. (You can choose the number from 0-9, A-E)
4. Press any key from the transmitter, you will hear a voice (success) the number has been registered successfully and then the number will skip to the next one.
5. Press “↵” it will exit to “E2”, press “↵” again to exit setting state.

## F2 Deletion Mode

### E1 Delete Transmitters

1. Press “\*” key 2 seconds, screen displays F1
2. Press “↓” key to display F2, press “\*” to display E1
3. Press “\*” to confirm, screen displays 01, “1” is flashing, and press “↑” “↓” “\*” key to choose the number you want delete.
4. Press “\*” key, you will hear a voice (success), this means number has been deleted successfully.
5. Press “↵” it will exit to “E1”, press “↵” again to exit setting state  
\* key can move digits. ↑ and ↓ can add or decrease number.

### E2 Delete Counter Number

1. Press “\*” key 2 seconds, screen displays F1
2. Press “↓” key, screen displays F2, press “\*” screen displays E1, press “↓” to show E2
3. Press “\*” to confirm, screen displays 1, “1” is flashing, and press “↑” “↓” key to choose the number you want delete. (You can choose the number from 0-9, A-E)
4. Press “\*” key, you will hear a voice (success), this means number has been deleted successfully.
5. Press “↵” it will exit to “E2”, press “↵” again to exit setting state

## F3 Display Setting

### E1 Display Mode

1. Press “\*” key 2 seconds, screen displays F1
2. Press “↓” key two times to display F3, press “\*” screen displays E1
3. Press “\*” to display 1 or 2, and then choose the one you need  
“1” means Live mode- means when No.1 No.2 No.3 call in turn, the screen shows 03 02  
01. Newest call number shows on the top of screen.  
“2” means the Queue mode- means when No.1 No.2 No.3 call in turn, the screen shows

01 02

4. Press “↵” it will exit to “E1”,
5. Press “↵” again to exit setting state

## E2 Storage Number

1. Press “\*” key 2 seconds, screen displays F1
2. Press “↓” key two times, screen displays F3, press “\*” screen displays E1, press “↓” to display E2
3. Press “\*” to confirm, press “↑” “↓” to choose the number from 01-99
4. Press “↵” it will exit to “E2”,
5. Press “↵” again to exit setting state

## F4 Logout Setting (Remove Timing Setting)

1. Press “\*” key 2 seconds, the screen displays F1
2. Press “↓” key three times, screen displays F4, press “\*” screen displays 00(or other numbers).
3. Press “↑” “↓” to choose the number from 00-99  
“00” means the number will be displayed on the screen until it is canceled.  
“01-99” means the time the last call will be displayed. If you choose 50, it means last number will be displayed for 50 seconds on the screen. When time is up, this number will be deleted automatically
4. Press “↵” it will exit to “F4”,
5. Press “↵” again to exit setting state

## F5 Cycle Mode

1. Press “\*” key 2 seconds, the screen displays F1
2. Press “↓” key four times, screen displays F5, press “\*” screen displays 00(or other numbers)
3. Press “↑” “↓” to choose the number from 00-99  
“00” means the number will be steady  
“01-99”. For example, if you choose 10 seconds, it means each 10 seconds number will cycle one time.
4. Press “↵” it will exit to “F5”, then it is successful.
5. Press “↵” again to exit setting state

## F6 Voice Setting

### E1 Voice Mode

1. Press “” key 2 seconds, the screen displays F1
2. Press “” key five times, screen displays F6, press “” screen displays E1
3. Press “” to confirm, screen displays 0(or other number)
4. Press “””” to choose the number from 0-7
  - “0” means English pronunciation (number and service type)
  - “1” means English pronunciation (number only)
  - “2” means English pronunciation (eg.No.105: One hundred and five + service type)
  - “3” means English pronunciation (eg.No.105: One hundred and five)
  - “4” means Ding Dong voice alert
  - “5” means music alert 1
  - “6” means music alert 2
  - “7” means warning sound
5. Press “” it will exit to “E1”,
6. Press “” again to exit setting state

For K-O3-N-K-436-B you can choose 0 or 2 or 4 is ok.

For example 002

0 : pls number zero zero two go to counter

2 : pls number two go to counter

4 : show 002 come with dingdong sound

### E2 The times of Voice Announcements (Default:1 time)

1. Press “” key 2 seconds, the screen displays F1
2. Press “” key five times, screen displays F6, press “” screen displays E1, press “” to display E2
3. Press “” to confirm, screen displays 1(or other number)
4. Press “” “” to choose the number from 1 to 9. (The number means the times the announcement will be repeated)
5. Press “” it will exit to “E2”,
6. Press “” again to exit setting state

### E3 Alert voice of cycling ( Whether read the number when cycling mode)

1. Press “” key 2 seconds, the screen will display F1
2. Press “” key five times, screen displays F6, press “” screen displays E1, press “” two times to display E3
3. Press “” to confirm, screen displays “0” or “1”
4. Press “””” to choose the number you want.
  - “0” means no voice alert for cycling. If you choose “0” means, No.1 2 3 4 5 etc. will show circularly without ringing.
  - “1” means with alert for cycling. If you choose “1” means, No.1 2 3 4 5 etc. will show circularly while ringing.
5. Press “” it will exit to “E3”,
6. Press “” again to exit setting state

### E4 Volume Setting (Default: 6)

1. Press “” key 2 seconds, screen displays F1
2. Press “” key five times, screen displays F6, press “” screen displays E1, press “” three times to display E4
3. Press “” to confirm, screen displays “0” (or other number)
4. Press “””” to choose the number you want.
  - “1” is mute., 9 is highest volume.
5. Press “” it will exit to “E4”, t
6. Press “” again to exit setting state

### E5 Brightness setting (Default: 7)

1. Press “” key 2 seconds, screen displays F1
2. Press “” key five times, screen displays F6, press “” screen displays E1, press “” four times to display E5
3. Press “” to confirm, screen displays “0” (or other number)
4. Press “””” to choose the number you want.
  - “1” is darkest. “7” is brightest.
5. Press “” it will exit to “E5”,
6. Press “” again to exit setting state

## **E6 Operational sound navigation**

0---OFF 1----OPEN

## **E7 “Number” position**

0---Number 01 CALL(English Way)

1---01 Number CALL(Chinese Way)

## **F7 Keyboard Setting (Default: OFF)**








### **F8 Key Settings**

#### **E1 Single-key or Multi-key Setting**


1---Single key

2---Multi key

#### **E2 Voice pairing**



 

 

 
1. Press “” key 2 seconds, the screen displays F1
2. Press “” key seven times, screen displays F8, press “” screen displays E1
3. Press “” to display E2 and Press “” to confirm, and you will see 00 (sound cancel)
4. Press “”””” to select the number (voice) you want.

For example, if you want “emergency” , you will select 26 , And press “emergency “ key from button. Then you will hear success.





5. Press “” again to exit setting state

When you press Emergency of button, you will hear voice like this “XX number Emergency”

#### **FP Choose the first number you like to start register**

1. Press “” key 2 seconds, the screen displays F1
2. Press “” key to choose FP, press “” and screen show 000 (3-digit number, first number can be letter A, b, C, d, E)
3. You can choose the number you need by “”””” or “” key, such as A01
4. Press “” again to exit setting state, press the transmitter , the number will be shown from A01

#### **F9 Restore factory setting**

1. Press “” key 2 seconds, the screen displays F1
2. Press “” key 8 times, screen displays F9, press “” screen displays E1
3. Keep press “” 2 seconds to confirm, you will hear a voice (success),