



K-TP20 Pager System User Manuals

⚙️ Function key: Enter menu, ENT key, Confirm key

Hold down for 3 seconds when turning ON/OFF

⬇️ Shift key: Navigate the menu

Cancel the alarm when warning

Instruction

-F1 Register number

Press the ⚙️ key, it will display F1, then press this key again, to display --- on the screen, you can choose any number from 001-999 on the keyboard transmitter (charger station), such as “001”, then press the “ENT”, the number 001 will show on the pager screen, it means this number has been registered successfully. Press the “ENT”/F1/F2 on the keyboard, the pager will sound and vibrate.



Note: F1 and F2 on the keyboard are service type. F3 means “cancel”

-F2 Voice Switch

0 stand for OFF and 1 means ON

-F3 Vibration Switch

0 stand for OFF and 1 means ON

-F4 Flicker Switch

0 stand for OFF, 1 means Marquee(Horse Race Lamp) and 2 means Full Bright

-F5 Prompting Time

01 means 10 seconds, 09 means 90 seconds, and 00 means prompt all the time

-F9 Factory Reset

Enter F9, press ENT key, adjust 001 to 000, then press confirm key.

Attention

Low Power Prompting

When the battery is low power, the pager screen will show “LLL” while flashing and beeping. Please charge in time.