



K-10 K-11 K-12 K-13 Pager System User Manuals

⚙️ Function key: Enter menu, ENT key, Confirm key

Hold down for 3 seconds when turning ON/OFF

⬇️ Shift key: Navigate the menu.


Cancel the alarm when ringing

Before you start using it, please plug the pager and keypad to power. You can mount all pagers to keypad base and plug charger cable to power. Charge for about 5 hours. When fully charged, pager's light will turn to orange/green.

Instruction

-F1 Register number

Press the ⚙️ key, it will show F1, then press this key again, to show --- on the screen, you can choose any number from 001-999 on the keyboard transmitter, such as "001", then press "ENT" key. The number 001 will show on the pager screen, it means this number has been registered successfully. Press the "ENT"/F3/F4 on the keyboard, the pager will sound and vibrate.

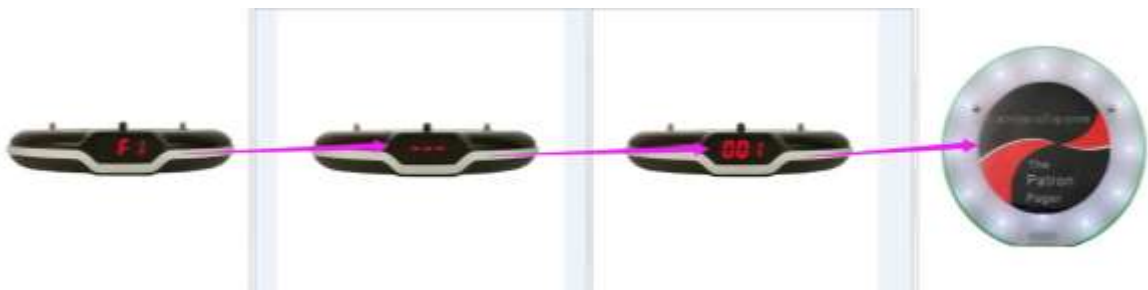

Note: F3 and F4 on the keyboard are service type. F2 means "cancel"

-F2 Voice Switch

0 stand for OFF and 1 means ON

- F3 Vibration Switch
0 stand for OFF and 1 means ON
- F4 Flicker Switch
0 stand for OFF, 1 means Marquee(Horse Race Lamp) and 2 means Full Bright
- F5 Prompting Time
01 means 10 seconds, 09 means 90 seconds, and 00 means prompt all the time
- F9 Factory Reset
Enter F9, press ENT key, adjust 001 to 000, then press confirm key.

Attention

Low Power Prompting

When the battery power is low, the pager screen will show “LLL” with flicker and “beep” sound. Please charge in time.