



K-2000A / K-2000AT Display User Manuals

Brief instruction

F1 Storage Mode (Set Transmitters number)

- E1-Register Transmitters
- E2-Register Remote Control
- E3-Register Alarm Function Transmitters
- E4-Register Cancel Function Transmitters

F2 Deletion Mode (Delete Transmitter Number)

- E1-Delete Transmitters
- E2-Delete Remote Control
- E3-Delete Alarm Function Transmitters
- E4-Delete Cancel Function Transmitters

F3 Display Setting

- E1 Display Mode
- E2 Storage Number

F4 Logout Setting (Remove Timing Setting)

F5 Cycle Mode

F6 Voice Setting

- E1-Voice Mode
- E2- The times of Voice Announcements
- E3-Whether to read the number when cycling
- E4- Volume Setting
- E5-Brightness setting
- E6-Operational sound navigation
- E7- “Number” position
- E8-To be developed
- E9-Whether read Counter Number (Suit for queue call system)

F7 Keyboard Setting

- E1 Partition Setting

F8 Key Settings

- E1 Single-key or Multi-key Setting
- E2 Voice pairing

F9 Restore Factory Settings

 : **Setting key, Confirm key, Move digit key**





 



 : **Exit system**

 : **Up key, Increase number key**

 : **Down key, Decrease number key**





 
 
 
F1 Storage Mode

E1 Register Transmitters

1. Press “” key 2 seconds, screen displays F1
 2. Press “” key, screen displays E1
 3. Press “” to confirm, screen displays 0001, “1” is flashing, and press “” “” “” key to select the number you want save.
 4. Press any key from transmitter, you will hear a voice (success), the number has been registered successfully and then the number will skip to the next one,.
 5. Press “” it will exit to “E1”, press “” again to exit setting state.
- NOTE: If you hear a voice (failure), it means the number has been used.

Note: Press the number on the screen directly, number will cancel

E2 Register Remote Control

1. Press “” key 2 seconds, screen displays F1
2. Press “” key, screen displays E1, press  to E2
3. Press “” to confirm, screen displays 0001, “1” is flashing and press “” “” “” key to select the number you want to save.

4 Press any key from remote control, you will hear a voice (success), the number has been registered successfully and then the number will skip to the next one

5. Press “↶” it will exit to “E2”, press “↶” again to exit setting state.

E3 Register Alarm Function Transmitters

1. Press “*” key 2 seconds, screen displays F1

2. Press “*” key, screen displays E1, press ↓ key two times to E3

3. Press “*” to confirm, screen displays 0001, “1” is flashing, and press “↑” “↓” “*” key to select the number 0001-999.

4 Press any key from the alarm transmitter, you will hear a voice (success), the number has been registered successfully and then the number will skip to the next one.

5. Press “↶” it will exit to “E3”, press “↶” again to exit setting state.

E4 Register Cancel Function Transmitters

1. Press “*” key 2 seconds, screen displays F1

2. Press “*” key, screen displays E1, press ↑ key to E4

3. Press “*” to confirm, screen displays 0001, “1” is flashing, and press “↑” “↓” “*” key to select the number 0001-999.

4 Press any key from cancel transmitter, you will hear a voice (success), the number has been registered successfully and then the number will skip to the next one.

5. Press “↶” it will exit to “E4”, press “↶” again to exit setting state

F2 Deletion Mode

E1 Delete Transmitters

1. Press “*” key 2 seconds, screen displays F1

2. Press “↓” key to display F2, press “*” to display E1

3. Press “*” to confirm, screen displays 0001, “1” is flashing, and press “↑” “↓” “*” key to select the number you want delete.

4. Press “*” key, you will hear a voice (success), means number has been deleted successfully.

5. Press “↶” it will exit to “E1”, press “↶” again to exit setting state

* key selects digits. ↑ and ↓ adds or decreases number.

E2 Delete Remote Control

1. Press “*” key 2 seconds, screen displays F1

2. Press “↓” key, screen displays F2, press “*” screen displays E1, press “↓” to display E2

3. Press “*” to confirm, screen displays 0001, “1” is flashing, and press “↑” “↓” key to select the number you want delete.

4. Press “*” key, you will hear a voice (success), means number has been deleted successfully.

5. Press “↶” it will exit to “E2”, press “↶” again to exit setting state

E3 Delete Alarm Function Transmitters

1. Press “*” key 2 seconds, screen displays F1

2. Press “↓” key, screen displays F2, press “*” screen displays E1, press “↓” two times to display E3

3. Press “*” to confirm, screen displays 0001, “1” is flashing, and press “↑” “↓” key to select the number you want delete.

4. Press “*” key, you will hear a voice (success), means number has been deleted successfully.

5. Press “↶” it will exit to “E3”, press “↶” again to exit setting state

E4 Delete Cancel Function Transmitters

1. Press “*” key 2 seconds, screen displays F1

2. Press “↓” key, screen displays F2, press “*” screen displays E1, press “↑” to display E4

3. Press “*” to confirm, screen displays 0001, “1” is flashing, and press “↑” “↓” key to select the number you want delete.

4. Press “*” key, you will hear a voice (success), means number has been deleted successfully.

5. Press “↶” it will exit to “E4”, press “↶” again to exit setting state

F3 Display Setting

E1 Display Mode

1. Press “” key 2 seconds, screen displays F1
2. Press “” key two times to display F3, press “” screen displays E1
3. Press “” to display 1 or 2, and then select the one you want
“1” means live mode- -means when No.1 No.2 No.3 call in turn, the screen shows 0003 0002 0001. Newest call number shows on the top of screen.
“2” means the queue mode- -means when No.1 No.2 No.3 call in turn, the screen shows 0001 0002 0003. Oldest call number shows on the top of screen.
4. Press “” it will exit to “E1”,.
5. Press “” again to exit setting state

E2 Storage Number

1. Press “” key 2 seconds, screen displays F1
2. Press “” key two times, screen displays F3, press “” screen displays E1, press “” to display E2
3. Press “” to confirm, press “” ” to select the number from 0001-999
4. Press “” it will exit to “E2”,.
5. Press “” again to exit setting state

F4 Logout Setting (Remove Timing Setting)

1. Press “” key 2 seconds, screen displays F1
2. Press “” key three times, screen displays F4, press “” screen displays 00(or other number).
3. Press “” ” to choose the number from 00-99
“00” means the number will be steady until it is canceled.
“01-99” means the time the last call will be displayed. If you choose 50, it means last number will be displayed for 50 seconds on screen. When time is up, this number will be deleted automatically
4. Press “” it will exit to “F4”,.
5. Press “” again to exit setting state

F5 Cycle Mode

1. Press “” key 2 seconds, screen displays F1
2. Press “” key four times, screen displays F5, press “” screen displays 00(or other number)
3. Press “” ” to select the number from 00-99
“00” means the number will be steady
“01-99”. For example, if you choose 10 seconds, it means each 10 seconds number will cycle one time.
4. Press “” it will exit to “F5”,.
5. Press “” again to exit setting state

F6 Voice Setting

E1 Voice Mode

1. Press “” key 2 seconds, screen displays F1
2. Press “” key five times, screen displays F6, press “” screen displays E1
3. Press “” to confirm, screen displays 0(or other number)
4. Press “” ” to choose the number from 0-7
“0” means English pronunciation (number and service type)
“1” means English pronunciation (number only)
“2” means English pronunciation (eg.No.15: Fifteen + service type)
“3” means English pronunciation (eg.No.15: Fifteen)
“4” means Ding Dong voice alert
“5” means music alert 1
“6” means music alert 2
“7” means warning sound
5. Press “” it will exit to “E1”,.
6. Press “” again to exit setting state

E2 The times of Voice Announcements (Default:1 time)

1. Press “*” key 2 seconds, screen displays F1
2. Press “↓” key five times, screen displays F6, press “*” screen displays E1, press “↓” to display E2
3. Press “*” to confirm, screen displays 1(or other number)
4. Press “↑” “↓” to select the number from 1 to 9.
5. Press “↶” it will exit to “E2”,.
6. Press “↶” again to exit setting state

E3 Alert voice of cycling (Whether to read the number while on cycling mode)

1. Press “*” key 2 seconds, screen displays F1
2. Press “↓” key five times, screen displays F6, press “*” screen displays E1, press “↓” two times to display E3
3. Press “*” to confirm, screen displays “0” or “1”
4. Press “↑” “↓” to select the number you want.
“0” means no voice alert while cycling. If you choose “0” means, No.1 2 3 4 5 etc. will show circularly without ringing.
“1” means with alert while cycling. If you choose “1” means, No.1 2 3 4 5 etc. will show circularly while ringing.
5. Press “↶” it will exit to “E3”,.
6. Press “↶” again to exit setting state

E4 Volume Setting (Default: 6)

1. Press “*” key 2 seconds, screen displays F1
2. Press “↓” key five times, screen displays F6, press “*” screen displays E1, press “↓” three times to display E4
3. Press “*” to confirm, screen displays “0” (or other number)
4. Press “↑” “↓” to select the number you want.
“1” is mute. 9 is highest volume.
5. Press “↶” it will exit to “E4”,.
6. Press “↶” again to exit setting state

E5 Brightness setting (Default: 3)

1. Press “*” key 2 seconds, screen displays F1
2. Press “↓” key five times, screen displays F6, press “*” screen displays E1, press “↓” four times to display E5
3. Press “*” to confirm, screen displays “0” (or other number)
4. Press “↑” “↓” to select the number you want.
“1” is darkest. “7” is brightest.
5. Press “↶” it will exit to “E5”,.
6. Press “↶” again to exit setting state

E6 Operational sound navigation

0---OFF 1---OPEN

E7 “Number” position

0---Number 0001 CALL(English Way)

1---0001 Number CALL(Chinese Way)

E8 To be developed

E9 Whether to read Counter Number (Suit for queue call system)

0---Please Number xxx go to Counter xx + Service type

1---Please Number xxx to to Counter + Service type

F7 Keyboard Setting (Default: OFF)

E1 Partition Setting

1. Press “*” key 2 seconds, screen displays F1
2. Press “↓” key six times, screen displays F7, press “*” screen displays E1
3. Press “*” to confirm, screen displays “OF” or “ON” or “1” “2” “3” “4” “5” “6” “7” “8” “9” “0” “A” “b” “c” “d” “E”
“OF” means display can’t receive all signals from all different partition’s keyboard
“ON” means display can receive all signals from all different partition’s keyboard number 0001-9999
“0” or “1” or “2” …… “E” means display only can receive one partition’s signal
4. Press “↑” “↓” to select the number you want.
5. Press “↶” it will exit to “E1”,.
6. Press “↶” again to exit setting state

NOTE: If the keyboard in partition 5, display also selects 5, it means display can receive all signals 0001-9999 from keyboard.





 


F8 Key Settings

E1 Single-key or Multi-key Setting


1---Single key

2---Multi key

E2 Voice pairing





1. Press “” key 2 seconds, screen displays F1
2. Press “” key seven times, screen displays F8, press “” screen displays E1
3. Press “” to display E2 and Press “” to confirm, and you will see 00 (sound cancel)
4. Press “” “” to select the number (voice) you want.

For example, if you want “emergency”, you select 26 , And press “emergency “ key from button. Then you will hear success.

 

5. Press “” again to exit setting state

 

When you press Emergency button, you will hear “XX number Emergency”

F9 Restore factory setting

1. Press “” key 2 seconds, screen displays F1
2. Press “” key 8 times, screen displays F9, press “” screen displays E1
3. Keep press “” 2 seconds to confirm, you will hear a voice (success),

F0 Date &Time Setting

Enter F0, you will see the Minute Area is flashing, use “” “” to adjust the minute.

Press the “” key, to navigate.. After setting the time and date, Press “” again to exit setting state